


Multifit

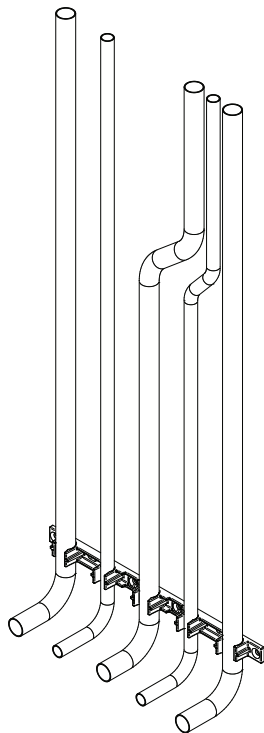

Part No. 7682790

Fitting Instructions

Rear Pipework Kit

Baxi 600 Combi
Baxi 600 System
Potterton Assure Combi
Potterton Assure System

Rear Pipework Kit

- This kit contains a set of pre-formed copper pipes that allow the water and gas pipes to be routed vertically behind the boiler.
- A lower pipe clip bracket is also supplied (Fig. 2), to be used in conjunction with the upper (Fig. 1) one provided with the boiler
- Condensate drain and PRV discharge pipework **MUST NOT** be run vertically !
- Mark the Wall Plate fixing points using the boiler template (Fig. 3).
- Align the lower pipe clip bracket securing holes with the vertical dashed lines on the template which represent vertical pipework runs.
- Mark two suitable fixing points for the lower pipe clip bracket.
- Drill & plug the fixing points. Secure the upper pipe clip bracket & wall plate and lower pipe clip bracket to the wall.
- Identify the pre-formed pipes (Fig. 4)
 - Straight 22mm x 2 - Heating Flow & Return **A**
 - Offset 22mm x 1 - Gas Supply **C**
 - Straight 15mm x 1 - DHW Flow (combi only) **B**
 - Offset 15mm x 1 - Cold Mains Inlet (combi only) **D**
- Engage the pipes in the pipe clip brackets - from left to right:-
 - Heating Flow
 - DHW Flow
 - Gas Supply
 - Cold Mains Inlet
 - Heating Return
- Continue with the installation.

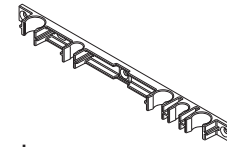


Fig. 1 Upper Pipe Clip Bracket (provided with boiler)

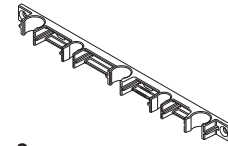


Fig. 2 Lower Pipe Clip Bracket

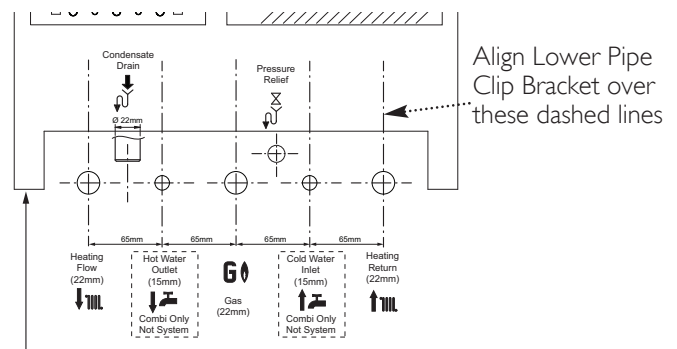


Fig. 3 Boiler Template

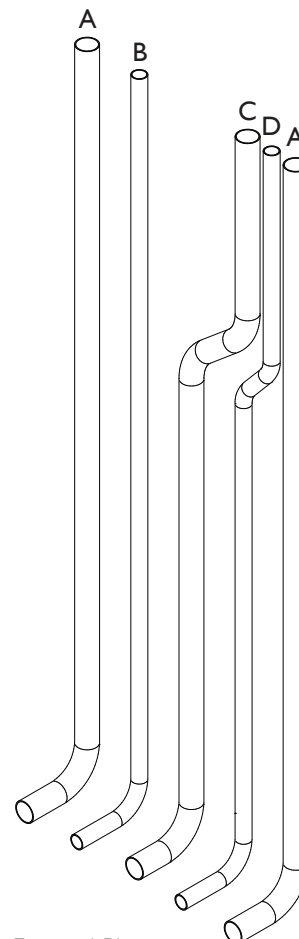



Fig. 4 Pre-Formed Pipes

Baxi Customer Support

 **0344 871 1545**

 Baxi
Brooks House,
Coventry Road,
Warwick, CV34 4LL

 **baxi.co.uk**