


Multifit

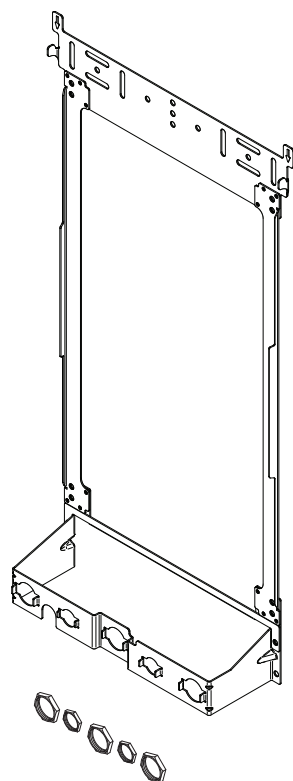

Part No. 7682545

Fitting Instructions

Pre-plumbing Jig

Baxi 600 Combi
Baxi 600 System
Potterton Assure Combi
Potterton Assure System

Pre-plumbing Jig

- The Pre-plumbing Jig replaces the Wall Plate supplied with the boiler (Fig. 1). This can be discarded & recycled using the appropriate local facility.

- It allows pre-plumbing of the heating system (and DHW pipework for combis) before the boiler is installed.

- Remove the boiler package banding and cardboard sleeve, then locate and extract the installation kit.

- Remove the taps (and DHW flow elbow for combis) & template from the installation kit. Three taps are supplied with system models, heating flow & return and gas supply. A fourth tap is included for combis - DHW cold mains inlet.

- The sleeve can be refitted to the boiler package and the banding eased back in position after replacing the installation kit.

- Remove the nuts & olives from the taps (and DHW flow elbow for combis) and set to one side (Fig. 2).

- Take the locknuts provided (Fig. 3) in the Pre-pumbing Jig kit and use them to secure the taps (and DHW flow elbow for combis) to the frame.

- Tap positions from left to right:-
 - Heating flow tap (incorporates drain tap)
 - DHW flow elbow (combi only)
 - Gas supply
 - DHW cold mains inlet tap (combi only)
 - Heating return tap

- Refit the nuts & olives to the taps (and DHW flow elbow for combis).

- Position the fixing template on the wall. The outline of the Wall Plate on the template corresponds with the upper crossmember of the Pre-plumbing Jig.

- Mark the position of the two most suitable upper fixing slots and the flue position.

- Drill & plug the wall for the upper fixing point. Secure the Pre-plumbing Jig ensuring it is level. Use the screws and plugs supplied in the boiler installation kit. Mark through the jig two lower fixing points.

- Remove the frame, drill & plug the wall for the lower fixing points and refit the jig.

- Connect the system pipework to the taps (and DHW flow elbow for combis).

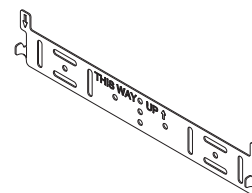


Fig. 1 Wall Plate supplied with boiler - to be discarded (please recycle)

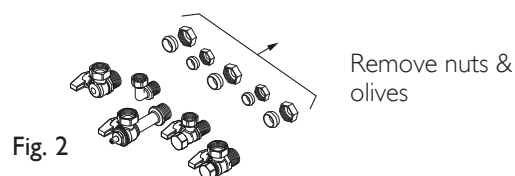


Fig. 2

Remove nuts & olives



Fig. 3

Locknuts

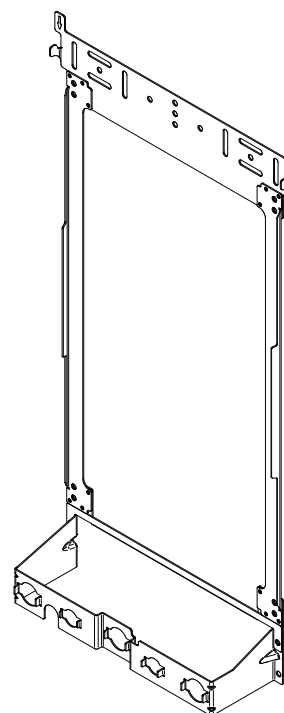


Fig. 4 Pre-plumbing Jig

Baxi Customer Support



0344 871 1545



Baxi
Brooks House,
Coventry Road,
Warwick, CV34 4LL



baxi.co.uk